

# *OBM N Series*

Professional Video Monitor

**HDR**



## Operational Instructions

OBM-N180

OBM-N210

OBM-N240

OBM-N310

OBM-N420

OBM-N460

OBM-N550



[www.postium.co.kr](http://www.postium.co.kr) / [www.postium.com](http://www.postium.com)

## **Table of Contents**

1. Precaution	3
2. Main Features	5
3. Location and Function of Parts and Controls	
<i>Front Panel</i>	6
<i>Rear Panel</i>	8
4. Using the Menu	10
5. Adjustment Using the Menus	11
6. OSD Menu Operations	
<i>Status Menu</i>	13
<i>Color Temp/Color Space/Gamma Menu</i>	14
<i>Zebra/Focus Menu</i>	16
<i>User Configuration Menu</i>	16
<i>Remote Menu</i>	20
<i>Security Menu</i>	21
7. Key Functions	22
8. Available Signal Formats	24
9. Product Specifications	26

## 1. Precaution

Always use set voltage.

AC 100 ~ 230V, 50/60Hz

DC 12V(OBM-N180/N210/N240) or DC 24V(OBM-N310)

All these instructions should be read and understood before operating the unit.

If liquid is spilled on or impacts this product, please disconnect the product immediately and seek professional help before continued use.

Unplug the unit from the wall outlet if it is not to be used for several days or more.

Keep unit in a well-ventilated place to prevent overheating.

Do not install the product near any heat-generating equipment. Also, keep the product out of direct sunlight or dusty areas.

Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

When using other DC 12V(OBM-N180/N210/N240) or DC 24V(OBM-N310) adapters instead of the standard adapter provided by the manufacturer, please check the proper load capacity or current capacity and use an adapter with stable voltage.

Do not overload AC outlets or extension cords. Overloading can cause fire or electric shock.

A very small proportion of pixels may be stuck, either always off (black), always on (red, green, or blue), or flashing. In addition, over a long period of use, because of the physical characteristics of the liquid crystal display, such stuck pixels may appear spontaneously. These problems are not a malfunction.

If a fixed picture such as a frame of a divided picture or time code, or a still picture is displayed for a long time, an image may remain on the screen and be superimposed as a ghosting image.

The permanent burn-in may occur for LCD panel if still images are displayed in the same position on the screen continuously, or repeatedly over extended periods.

To reduce the risk of burn-in,

- a. Turn off the character displays.
- b. Turn off the power when not in use.
- c. Turn off the power if the monitor is not to be used for a prolonged period of time.

Do not attempt to service the product yourself. Removing covers can expose you to high voltage and other dangerous conditions. Request a qualified service person to perform servicing.

When the product needs replacement parts, make sure that the service person uses replacement parts specified by the manufacturer, or those with the same characteristics and performance as the original parts. Use of unauthorized parts may result in fire, electric shock and/or other danger.

Only clean the product with a noncommercial, mild and neutral detergent.

Do not throw away the carton and packing materials. When transporting the product, make use of its original packaging for safer carriage.

### FCC (Federal Communications Commission)

This equipment has been tested and found to comply with the limits for class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

**⚠ Warning!!** : Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

### Disposal of Old Electrical & Electronic Equipment

(Applicable in the European Union and other European countries with separate collection systems)



This symbol on the product or on its packing indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequence for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources.


## 2. Main Features

The OBM N series offers the superior picture quality and wide viewing angle, and includes an array of professional features and the advanced audio & video signal analysis functions including Waveform, Vector Scope, Audio Level Meter, IMD, Camera Log Selection, Custom 3D LUT Import, Focus Assist, etc. The OBM N series are equipped with various I/O interfaces such as 3G-SDI, HDMI, Component, Composite, DVI. The wide model lineup from 18.5" up to 55" provides the best solutions from the field production to monitoring in studio.

- 3G/HD/SD-SDI 2 Channel
- HDR(High Dynamic Range) Display supporting PQ EOTF(ST 2084), Hybrid Log Gamma, S-Log3
- 3D-LUT for Accurate Color Reproduction
- 1.064 Billion Colors
- Camera Log Conversion
- Camera Log Mapped SDI Loopout
- Custom 3D LUT File Import Through USB
- Gamma Selection (1.0 ~ 3.0)
- Color Temperature(3200K, 5500K, 6500K, 9300K, USER 1/2/3, D-CINEMA)
- HDR & Camera log Compare (Side by Side, Wipe Position)
- Waveform, VectorScope (Wave + Vector, Waveform Wide, Position Change, Size Adjustment)
- Monitor Control via Ethernet, RS-422
- Various Markers (EBU, 4:3, 16:9, 1.85:1, 2.35:1, Variable etc.)
- White Internal Patterns Display for Color Test
- Easy Firmware Update by USB
- Fast Mode
- Focus Assist
- Zebra
- HDR Waveform
- Zero Scan / 1:1 Scan
- H/V Delay
- Blue/Mono Only
- Time Code Display
- IMD
- De-embedded 8~16ch Audio Level Meter
- Remote Control via GPI(RJ-45) Port
- 3 Color TALLY Lamp
- Rack & VESA Mount (Option)
- Closed Caption(608, 708)
- System Data Copy
- Key Lock & Password Lock
- Aspect
- Freeze

## 3. Location and Function of Parts and Controls

### Front Panel

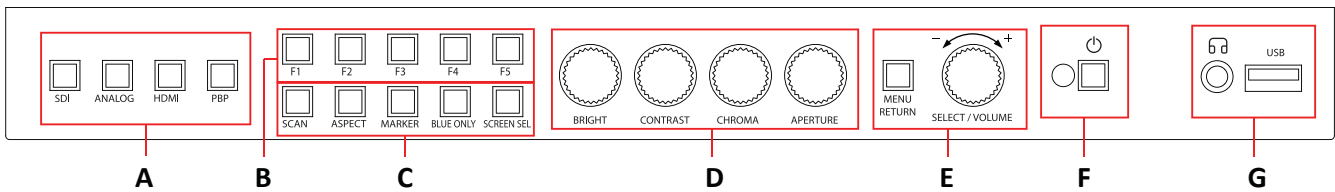

#### A : Input select Buttons/Lamp

Press to monitor the signal input to each connector.

##### [SDI-A] Button/Lamp

- Press the button to select 3G SDI-1 input

##### [SDI-B] Button/Lamp

- Press the button to select 3G SDI-2 input

##### [ANALOG] Button/Lamp

- Press the button to select Analog Input.
- Mode changes in the order of [Composite] [Component].

##### [DIGITAL] Button/Lamp

- Press the button to select Digital input.
- Mode changes in the order of [HDMI] [DVI].

#### B : F1 ~ F5 Button/Lamp

Press to adjust or turn on/off the assigned function.

The following functions are assigned at the factory.

[F1]: HDR&Cam.Log Compare

[F2]: H/V Delay

[F3]: Color Temp

[F4]: Audio Level Meter

[F5]: Time Code

#### C : Function Button/Lamp

Press to adjust or turn/off each function.

[SCAN] Button- Press the button to adjust the scan mode. (Zero Scan, 1:1 Scan).

[ASPECT] Button- Press the button to select the Aspect Ratio of the signal.

- Mode changes in the order of [16:9] [4:3] [2.35:1] [1.85:1] [15:9] [16:10] [AUTO].

[MARKER] Button

- Press the button to activate and deactivate the Marker.

[BLUE ONLY] Button

- Press the button to activate and deactivate the Blue Only function.
- You may remove R(red) and G(green) from the input signal and play the screen only with B(blue) signal. This function is convenient to adjust Chroma and Phase and to observe the signal noise.
- The button may be pressed twice to change the screen to MONO mode. (This mode uses only Luminance value)

[KEY LOCK] Button - Press the button to lock all buttons except Power

#### D : Rotary encoder

[BRIGHT] knob

Press this knob to display the adjustment screen and adjust the picture brightness. Press again to hide the adjustment screen. Turn the knob right to increase the brightness and turn left to decrease it.

[CONTRAST] knob

Press this knob to display the adjustment screen and adjust the picture contrast. Press again to hide the adjustment screen. Turn the knob right to increase the contrast and turn left to decrease it.

**[CHROMA] knob**

Press this knob to display the adjustment screen and adjust the color intensity. Press again to hide the adjustment screen. Turn the knob right to increase the color intensity and turn left to decrease it.

**[APERTURE] knob**

Press this knob to display the adjustment screen and adjust the picture sharpness. Press again to hide the adjustment screen. Turn the knob right to make the picture sharper and turn it left to make the picture softer.

**E : Menu Operation Buttons**

Displays or sets the on-screen menu.

**[MENU/RETURN]**

- Activates and deactivates the display of the Main Menu.
- When the on-screen menu is not displayed, if this button is pressed the main menu is displayed. When the menu is displayed, press the button to return to the previous menu.


**[SELECT/VOLUME] knob (Menu selection control)**

- When the menu is displayed, turn the knob to select a menu item or setting value, and then press the knob to confirm the setting.
- If the menu is not displayed and this knob is pressed, the adjustment screen of [VOLUME] is displayed to adjust the audio volume.
- Press this knob to change the modes in the order of [Focus Frequency] [Zebra Level] [Line Position] [Variable Marker] and adjust each mode's value.
  - [Focus Frequency]: When Focus Assist function is activated, this mode is displayed.
  - [Zebra Level]: When Zebra function is activated, this mode is displayed.
  - [Line Position]: When WFM/Vector function and Line Select function is activated, this mode is displayed.
  - [Variable Marker]: When Marker function is activated and Aspect Marker is set Variable, this mode is displayed.

**F :  (Standby) switch and indicator**

- Press to turn the power on when this monitor is in standby mode. After being turned on, the monitor performs initialization and the indicator flashes in green.
- Press the switch again for a second to set the monitor in standby mode. Then, the indicator flashes in orange and then turns red. The indicator in orange means that the monitor goes into the standby mode.  
When the indicator flashes in orange, this button doesn't work.


**G :  (headphone) jack & Speaker and USB connector****Headphone jack & Speaker**

- The audio signal which is selected using the input select button is output in stereo sound.
- When SDI signals are input, the audio signals of the channels selected with SDI Audio Setting in the User Configuration menu are output.
- When the headphones are connected to the  jack, audio signals will not be output.

**[USB] Connector**

- To update CPU, GPU, FPGA program.
- To connect the monitor with the Color Calibration program provided by the manufacturer and perform the color calibration.
- To connect the monitor with the control program provided by the manufacturer and control functions remotely.
- Custom 3D LUT File Import via USB memory stick or pc(\*.cube, 33^3, 65^3)

## Rear Panel

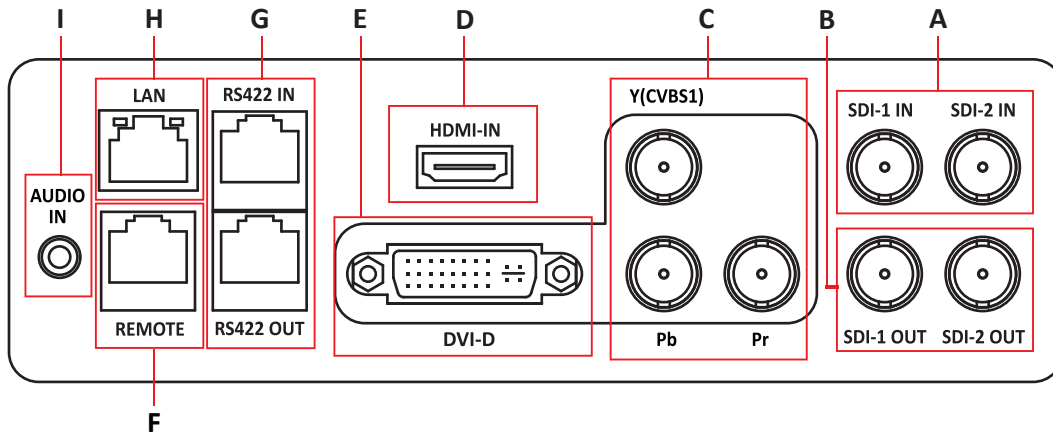

### A : SDI IN (SDI Input) connectors (BNC)

Input connectors for SDI signals. For details, see “Connecting the SDI Signals” (page 26).

### B : SDI OUT (SDI Output) connectors (BNC)

Output connectors for SDI signals.

Each connector outputs the signal which is input to the corresponding SDI IN connector.

**\*\*Note** - Output is activated only when the power is on. Output is not activated in standby mode.

### C : Analog input connectors

Input connectors for analog signals (CVBS, Component).

### D : HDMI input connectors

Input connectors for HDMI signals.

### E : DVI-D Input connector


Input connector for DVI signal.

### F : PARALLEL REMOTE connector(RJ-45, 8-pin)

Forms a parallel switch and controls the monitor externally.

**\*\*Note** - For safety, do not connect the connector for peripheral device wiring that might have excessive voltage to this port. Follow the instructions about this port.

[Pin Assignment]

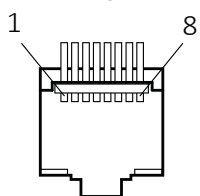

Functions can be changed in [Remote] section of the menu.

Pin Number	Function
1	SDI
2	Analog
3	HDMI
4	Digital
5	1:1 Scan
6	Aspect
7	Power
8	GND



### G : SERIAL REMOTE IN/OUT connector (RJ-45)

Used for the future function expansion.

Connects the monitor to the control program provided by the manufacturer by using RS-422/485 communication or the external UMD(IMD) equipment and controls the monitor.

### H : LAN(10/100) IN/OUT connector

Used for the future function expansion.

Connects to the LAN (10/100) connector of the network by using 10BASE-T/100BASE-TX LAN cable.

A daisy chain connection using the LAN input/output connectors enables the control of multiple monitors in sequence.

### I : AUDIO IN connector (Stereo mini jack)

Connector for analog audio input.

Analog input can be selected with SDI Audio Setting in User Configuration menu.

### J : DC IN terminal


Connects the DC power supply to the monitor.

- OBM-N180 / N210 / N240 : 12V


- OBM-N310: 24V

Make sure to use DC 12V power supply for OBM-N180/N210/N240 and DC 24V power supply for OBM-N310.

OBM-N180/N210/N240

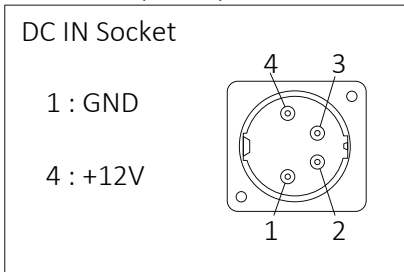


OBM-N310

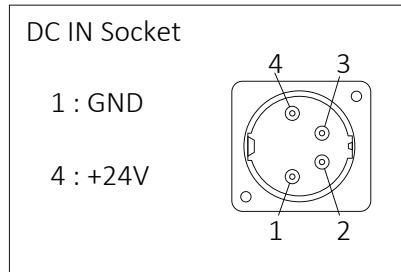

### K : AC IN terminal

AC power input connector.

Connects the provided AC power cord.

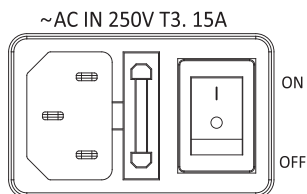

## 4. Using the Menu

This monitor is equipped with an OSD menu to make various adjustments and settings such as picture control, input setting, set setting change, etc.

### 1. Press the MENU button.

The menu appears.


The menu presently selected is shown in gray.



### 3. Select an item.

Turn SELECT/VOLUME knob to select the item, then press the knob.

The item to be changed is shown highlighted, and the sub menu is displayed on the right.

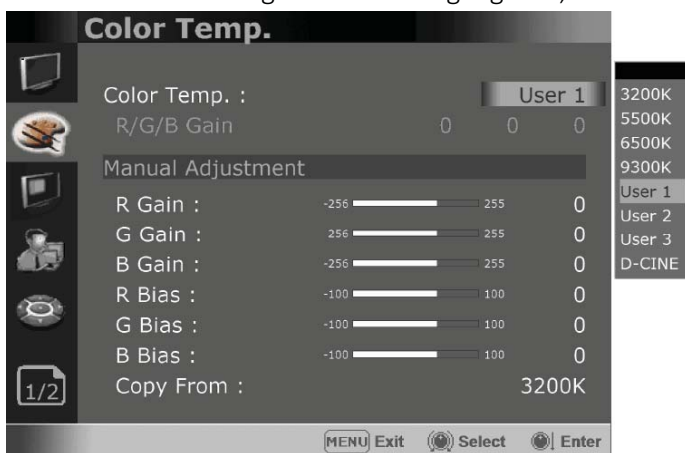

### 4. Make the setting or adjustment on an item.

#### How to change the adjustment level:

To increase the level, turn the SELECT/VOLUME knob right.

To decrease the level, turn the SELECT/VOLUME knob left.

#### How to change the setting:

Turn the SELECT/VOLUME knob to change the setting, then press the knob to confirm the setting.

**\*\*Note** - An item displayed in gray cannot be accessed. The item is accessible if it is displayed in white.

#### To return the display to the previous screen





Press the MENU button.

#### To clear the menu

Press the MENU button.

## 5. Adjustment Using the Menus

The OSD menu of this monitor consists of the following items.

	<p><b>Status menu</b> (To indicate the current settings)</p> <ul style="list-style-type: none"> <li>Format</li> <li>Color Temp</li> <li>Brightness</li> <li>Contrast</li> <li>Chroma</li> <li>Aperture</li> <li>Color Space</li> <li>Gamma</li> <li>User Preset</li> <li>RGB Range</li> <li>Back Light</li> <li>WFM/Vector</li> <li>Audio Level Meter</li> <li>Focus Assist</li> <li>Time Code</li> <li>Volume</li> <li>SDI Payload ID                             <ul style="list-style-type: none"> <li>Identifier</li> <li>Sampling</li> <li>Picture Rate</li> <li>Scanning Method</li> <li>Bit Depth</li> <li>Link Assignment</li> </ul> </li> <li>Model Name</li> <li>Serial Number</li> <li>Board Version</li> <li>Operation Time</li> <li>Last Calibration Time</li> </ul>
	<p><b>Color Temp./Color Space/Gamma menu</b></p> <ul style="list-style-type: none"> <li>Color Temp.                             <ul style="list-style-type: none"> <li>R/G/B Gain</li> </ul> </li> <li>Manual Adjustment                             <ul style="list-style-type: none"> <li>R Gain</li> <li>G Gain</li> <li>B Gain</li> <li>R Bias</li> <li>G Bias</li> <li>B Bias</li> <li>Copy From</li> </ul> </li> <li>Color Space</li> <li>OBM-HDR</li> <li>Gamma</li> <li>Gamma Log                             <ul style="list-style-type: none"> <li>Default Log Sel.</li> <li>User Log Sel.</li> </ul> </li> <li>Back Light</li> <li>HDR&amp;Cam.Log Comparison</li> <li>Wipe Position</li> </ul>
	<p><b>Zebra/Focus menu</b></p> <ul style="list-style-type: none"> <li>Zebra                             <ul style="list-style-type: none"> <li>Level Adjustment</li> </ul> </li> <li>Focus Assist                             <ul style="list-style-type: none"> <li>Color</li> <li>Frequency</li> </ul> </li> </ul>
	<p><b>User Configuration menu</b></p> <ul style="list-style-type: none"> <li>User Preset</li> <li>Function Button Setting                             <ul style="list-style-type: none"> <li>F1 Button</li> <li>F2 Button</li> <li>F3 Button</li> <li>F4 Button</li> <li>F5 Button</li> </ul> </li> <li>Input Setting                             <ul style="list-style-type: none"> <li>3G Signal Format</li> <li>RGB Range</li> </ul> </li> <li>Speaker Out / Audio Level Meter Setting                             <ul style="list-style-type: none"> <li>SDI Left Speaker Out</li> <li>SDI Right Speaker Out</li> <li>HDMI L/R Speaker Out</li> <li>Audio Level Meter                                     <ul style="list-style-type: none"> <li>Display</li> <li>Reference</li> <li>Size/Transparency</li> <li>Peak Hold Time</li> </ul> </li> </ul> </li> <li>Marker Setting</li> <li>Marker                             <ul style="list-style-type: none"> <li>Aspect Marker                                     <ul style="list-style-type: none"> <li>Variable Aspect</li> </ul> </li> <li>Center Marker</li> <li>Area Marker</li> <li>Color</li> <li>Aspect Mat</li> <li>Fit</li> <li>Thickness</li> </ul> </li> <li>WFM/Vector Setting</li> <li>WFM/Vector                             <ul style="list-style-type: none"> <li>Intensity</li> <li>Transparency</li> <li>Color</li> <li>Line Select                                     <ul style="list-style-type: none"> <li>Line Position</li> </ul> </li> <li>Position</li> <li>Size</li> <li>WFM&amp;Throughout w/ Camera log</li> </ul> </li> <li>Closed Caption Setting                             <ul style="list-style-type: none"> <li>Closed Caption                                     <ul style="list-style-type: none"> <li>Type</li> <li>708</li> <li>608</li> </ul> </li> </ul> </li> <li>Fast Mode Setting                             <ul style="list-style-type: none"> <li>Fast Node</li> </ul> </li> <li>System Setting                             <ul style="list-style-type: none"> <li>Factory Reset</li> <li>Internal Pattern</li> <li>Key LED</li> <li>OSD Time</li> <li>OSD position</li> <li>System Data</li> </ul> </li> <li>TimeCode</li> </ul>



## Remote menu

Parallel Remote

- 1 Pin
- 2 Pin
- 3 Pin
- 4 Pin
- 5 Pin
- 6 Pin
- 7 Pin
- 8 Pin

Monitr ID

In-Monitor Display Setting

- IMD Type
- Transparency
- Text Color
- Left Tally Color
- Right Tally Color



## Security Setting

Key Lock  
Password

- User Parameter Lock
- Change Password


## 6. OSD Menu



### Operations Status Menu

The Status menu displays the current status of the monitor. The following items are displayed.

#### Page 1/4

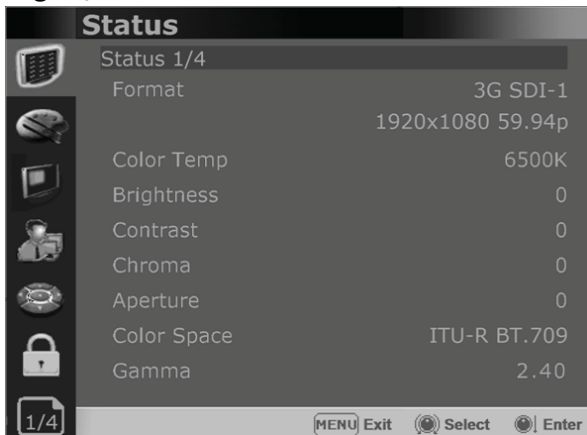


- Format
- Color Temp
- Brightness
- Contrast
- Chroma
- Aperture
- Color Space
- Gamma

#### Page 2/4




- User Preset
- RGB Range
- Back Light
- WFM/Vector
- Audio Level Meter
- Focus Assist
- Time Code
- Volume

#### Page 3/4

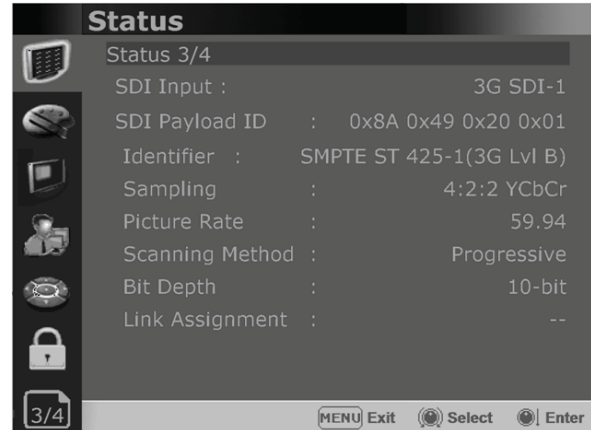

- SDI Input
- SDI Payload ID
- Identifier
- Sampling
- Picture Rate
- Scanning Method
- Bit Depth
- Link Assignment

#### Page 4/4

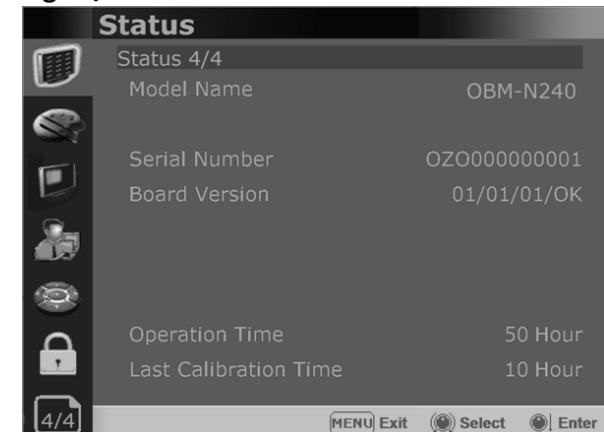

- Model Name
- Serial Number
- Board Version
- Operation Time
- Last Calibration Time

\*\* The information on the SDI input signal of the Single mode or the Left Side of P&P mode is displayed.

\*\*\* When the SDI signal is connected, these items are displayed.



## Color Temp/Color Space/Gamma Menu

These menus are used for adjusting or setting the color temperature, color space or gamma of the picture.

### Page 1/2



#### Color Temp

- Selects the color temperature from among [3200K] [5500K] [6500K] [9300K] [User1] [User2] [User3] [DCI-P3].

**\*\*Note** - If Color Space is set to [DCI-P3], Color Temp. is fixed to [DCI-P3].

#### R/G/B Gain

- Displays the R/G/B Gain of the current Color Temperature.

#### Manual Adjustment

- If you set the Color Temp. to User 1/2/3, the item is changed from black to white, which means you can adjust the color temperature.


#### R/G/B Gain/Bias

- Adjusts the color balance(Gain, Bias).

#### Copy From

- The Gain and Bias data of each Color Temp. are restored to User adjustment.

### Page 2/2

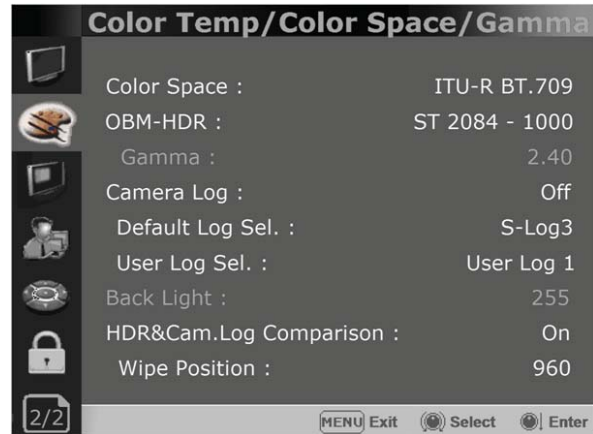

#### Color Space

- Selects the color space between [ITU-R BT.709], [Native].

#### OBM-HDR

Selects 4 modes of HDR gamma.

- ST-2084 1000: This mode displays the relative brightness up to 1000cd/m<sup>2</sup>. The part exceeding 1000cd/m<sup>2</sup> is clipped.

- ST-2084 10000 : The characteristics of LCD panel doesn't allow to produce the ideal brightness required by this standard, so the gamma is displayed in the relative brightness.

- HLG-1.0 / 1.1 / 1.2 / 1.3 / 1.4 / 1.5 : These modes allow the user to apply HLG from 1.0 up to 1.5.

- S-Log3: Select the S-Log3(HDR) gamma.

#### Gamma

- Selects the appropriate gamma mode from 1.00 to 3.00.

**\*\*Note** - When the OBM-HDR is set Off, this menu becomes activated.

- When the color space is set to Native, this menu becomes deactivated.



## Color Temp/Color Space/Gamma Menu

### Camera Log

- | Selects a camera log for the input signal.
- | [Off]: Sets off the camera log.
- | [Default]: The log which is selected in [Default Log Sel.] menu is applied.
- | [User]: The log which is selected in [User Log Sel.] menu is applied.
- | [Import Log Data]: Allows the user to save the Log LUT in USB memory stick to the monitor. The saved LUT can be used in User Log.

### Default Log Sel.

- | Allows the user to select a camera log among C-Log, Log-C EI 160~3200, S-Log2 To LC-709, S-Log2 To LC-709TypeA, S-Log2 To Slog2-709, S-Log2 To Cine+709, S-Log2 To LC-709, S-Log3 To LC-709TypeA, S-Log3 To Slog2-709, S-Log3 To Cine+709, J-Log1.

### User Log Sel.

- | Selects User Log 1 to 4.

#### \*\*Note

- If you insert the USB memory stick which contains the user log data to the monitor and push Enter in [Import Log Data] menu, the data is saved to the monitor.
- The file name of the user log data is displayed on the OSD up to 15 characters, and the log data file should be placed on the top folder of the USB memory stick.

Ex) If the file name is 'S-log3 to LC709\_A.cube', it is displayed as 'S-log3 to LC709' on the OSD.

### Back Light

- | - Adjusts the level of the back light level.
- | If the back light value is increased, the screen becomes brighter.

\*\* If the setting in Color Temp. menu and Color Space menu is changed, the value of Back Light returns to the default value of the color calibration in the factory.

### HDR&Cam.Log Comparison


- | Divides the screen side by side, applies HDR or Camera log on the left side, and compares the picture between the left side and the right side.

### Wipe Position

- | Adjusts the boundary line of the left and right area. Allowed to adjust the boundary line by using the SELECT/VOLUME knob



## Zebra/Focus Menu

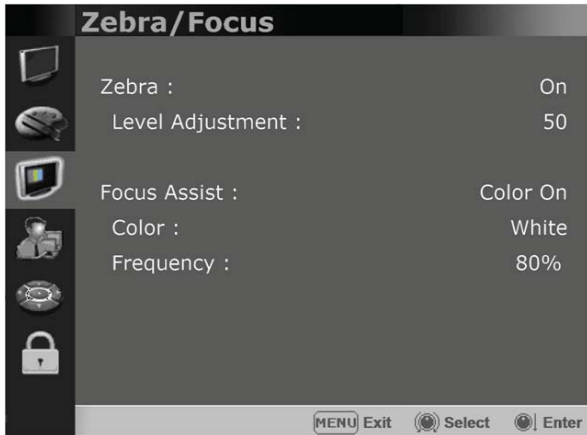

### Zebra

- Evaluates the Luma(Y') level of the input image. If the certain Y' level is set, the pixels with the designated Luma(Y') level are displayed in zebra pattern.

\*\* Pixels with Y' level over 100% turn to red zebra pattern, and pixels with Y' level under 0% turn to green zebra pattern.

### Level Adjustment

- Adjusts the Y' level as the user wants.

### Focus Assist

- Controls the aperture level of a video signal and displays images on screen with sharpened edges to help camera focus operation.

Available types are [Color On] and [Mono On].

- [Color On]: The background image is the original color type.
- [Mono On]: The background image is the mono type.

### Color

- Selects a color for Focus Assist among [RED], [Green], [Blue], [White], [Yellow], [Cyan], [Magenta].

### Frequency


- Adjusts the edge difference level between the edges in an image.
- Available values are from 0% to 100%.



## User Configuration Menu

User Configuration consists of the adjustment menus such as [User Preset], [Function Button Setting], [Input Setting], [Speaker Out / Audio Level Meter Setting], [Marker Setting], [WFM/Vector Setting], [Closed Caption Setting], [System Setting].

### Page 1/7

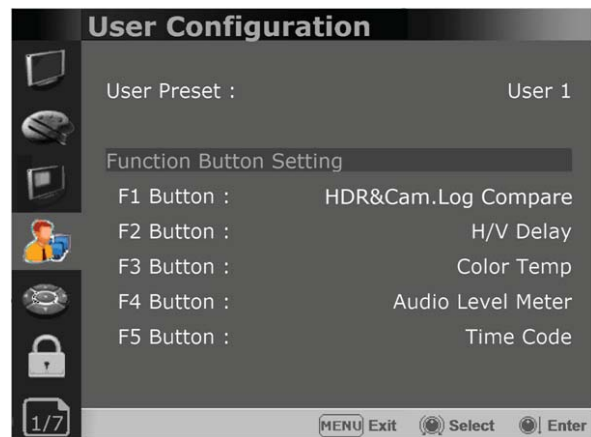

### User Preset

- Allows to check the adjustment status which each user presets.
- All the adjustments the user sets are automatically saved.

### Function Button Setting

- Assigns the function for F1 to F5 buttons on the front panel.

The following functions can be assigned. :  
[HDR&Cam.Log Compare],[H/V Delay],[ColorTemp.], [Audio Level Meter],[Time Code],[Zebra],[Focus Assist],[WFM/Vector],[Camera Log], [Closed Caption], [OBM-HDR],[Freeze]

- The following functions are assigned in the factory.


- [F1 Button]:** HDR&Cam.Log Compare
- [F2 Button]:** H/V Delay
- [F3 Button]:** Color Temp
- [F4 Button]:** Audio Level Meter
- [F5 Button]:** Time Code





## User Configuration Menu

Page 2/7

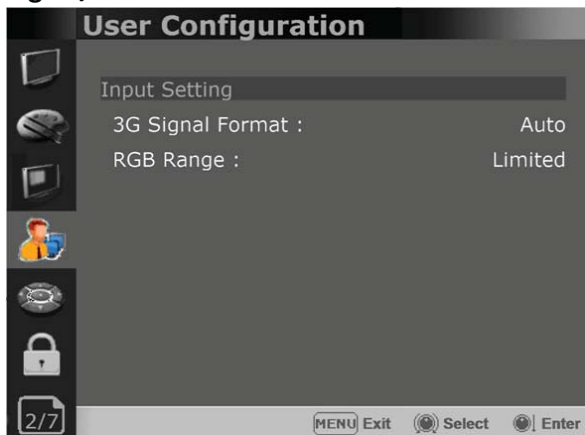

### Input Setting

#### 3G Signal Format

- Selects the format of 3G SDI input signal.
- : [Auto],[A 4:4:4 YUV 10b],[A 4:4:4 GBR 10b], [A 4:4:4 YUV 12b],[A 4:4:4 GBR 12b], [A 4:2:2 YUV 12b],[B DL 4:4:4 YUV 10/12b], [B DL 4:4:4 GBR 10/12b],[B DL 4:2:2 YUV 12b], [B DL 4:2:2 YUV 10b 60p]

#### RGB Range

- Selects Black Level and White Level of RGB format.
- \*Limited : 64(10bit)/256(12bit) ~ 1023(10bit)/4095(12bit)
- \*Full: 0(Black Level) ~ 1023(10bit)/4095(12bit)

Page 3/7



### Speaker Out / Audio Level Meter Setting

- Selects the audio channel of the SDI & HDMI input signal.

#### SDI : Left Speaker Out / Right Speaker Out

- Selects the embedded audio channel for the left and right audio out of the Headphone jack on the front panel of the monitor. Audio channel can be selected among Ch1 ~ Ch16, Analog.

#### HDMI : L/R Speaker Out

- Selects the embedded audio channel of the HDMI signal. The available models are [Off], [HDMI On], [Analog On].

### Audio Level Meter Setting

- Selects the embedded audio mode.
- : [Off], [8Ch [G1+G2]], [8Ch [G2+G3]], [8Ch [G3+G4]], [8Ch [G1+G3]], [8Ch [G1+G4]], [8Ch [G2+G4]], [16Ch [G1~G4]]
- \*\* In HDMI input, either [Off] or [HDMI 2Ch] can be selected.

#### Display

- Selects the display method for Audio Level Meter. Available modes are [Group] and [Pair].
- \*\* In HDMI input, the mode is fixed to [Pair].

#### Reference

- Selects the default value of Audio Level Meter. Available options are [-18dB] and [-20dB].

#### Size/Transparency

- Selects the size and transparency of Audio Level Meter.
- Available options are [Normal/Full], [Normal/Half], [Large/Full], [Large/Half].


#### Peak Hold Time

- Controls the speed rate of Peak Hold Decay Time occurring when the audio volume decreases.



## User Configuration Menu

Page 4/7

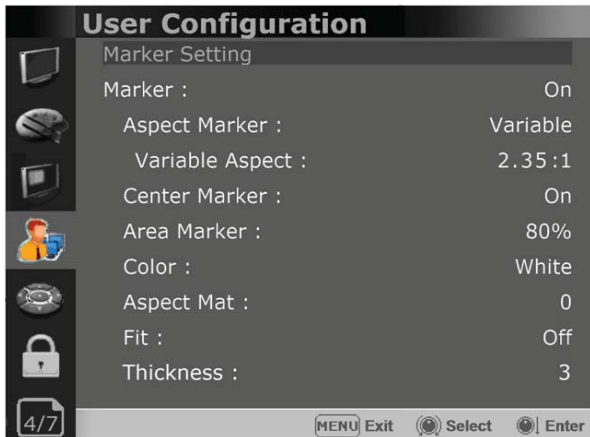

### Marker

- Selects On to display the marker, and Off to deactivate it.

#### Aspect Marker

Selects the aspect ratio of the marker.

You can select from among [Off], [16:9], [4:3], [4:3 ON AIR], [15:9], [14:9], [13:9], [1.85:1], [2.35:1], [2.39:1], [1.85:1 & 4:3], [1.66:1], [1.896:1], [Variable].

#### \*Variable Aspect

Allows the user to select the aspect ratio from the range between 1.00:1 and 3.00:1.

#### Center Marker

Selects On to display the center marker and Off not to display it.

#### Area Marker

Selects the size of the area marker.

You can select from among [Off], [80%], [85%], [88%], [90%], [93%], [100%], [EBU Action 16:9], [EBU Graphic 16:9], [EBU Action 14:9], [EBU Graphic 14:9], [EBU Action 4:3], [EBU Graphic 4:3].

#### Color

Selects the color of the marker.

You can select from among [White], [Gray], [Red], [Green], [Blue], [Yellow], [Cyan], [Magenta].

#### Aspect Mat

Darkens the outside of the area of the Aspect Marker. You can select from 0 to 7.

#### Fit

With Fit On, the Area Marker is displayed relative to the Aspect Marker in use.

With Fit Off, the Area Marker is displayed relative to the incoming video source.

#### Thickness

Adjusts the thickness of the marker lines. You can select it from 1 to 7.

Page 5/7



### WFM/Vector

- Sets to activate and deactivate Waveform monitor and Vectorscope.

You can select from among [WFM], [VectorScope], [WFM+Vector], [WFM Wide].

\*This function doesn't work when RGB format signal is input.

\* [WFM/Vector] function works in SDI input only.

\* [WFM Wide] function doesn't work in PBP Mode

#### Intensity

Adjusts the brightness of Waveform and Vectorscope display.

You can select from 1 to 64.

#### Transparency

Adjusts the transparency level of Waveform and Vectorscope.

[Black]: The background is black. Displayed image is hidden behind the background.

[Half]: The background is transparent. Displayed image can be seen indistinctly behind the Waveform and Vectorscope display.

#### Color

Selects the color of Waveform monitor.

Available colors are [Green] and [White].

#### Line Select

Selects [On] to display the Waveform of the line assigned in [Line Position] below.

#### \*Line Position

Selects the specific horizontal line for Waveform and Vectorscope.

Increases the value to move the line upwards and decreases the value to move the line downwards.

#### Position

Sets the position of Waveform and Vector Scope. [Right Bottom], [Left Bottom], [Left Top], [Right Top] can be selected.

\*\* This function doesn't work in P&P mode.

## Size

Sets the size of Waveform and Vector Scope.  
[Large] and [Small] can be selected.


\* The size of Waveform and Vector Scope is fixed as Small in PBP Mode

## WFM&Throughout w/ Camera log

The Waveform is displayed on the basis of the image, which the Camera log is applied to. And, the image, which the Camera log is applied to, is output by the loop-through.

\* This function works with SDI-1 input and output.

## Page 6/7

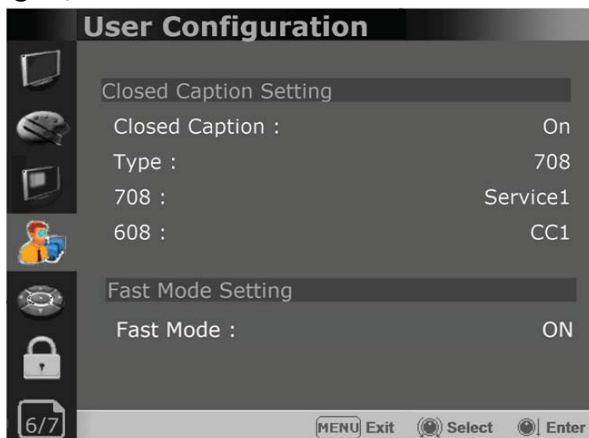

## Closed Caption Setting

### Closed Caption

Selects [On] to display the Closed Caption and [Off] not to display.

### Type

Sets the Closed Caption type

[708]: Selects this mode to display 708 when HD-SDI signal is input.

[608(VBI)]: Selects this mode to display 608(VBI) when SD-SDI signal is input.

[608(708)]: Selects this mode to display 608(708) when D-SDI signal is input.

### 708

Sets the Closed Caption type for 708.  
Selects from [Service1] to [Service6].

### 608

Sets the Closed Caption type for 608(708) and 608(VBI). Selects from [CC1] to [CC4].

## Fast Mode Setting

This function allows the total latency to become nearly the zero delay, from the receipt of the signal to the on-screen display.

### Fast Mode

Sets the fast mode.

## Page 7/7



## System Setting

### Factory Reset

Initializes OSD values to the factory default.

### Internal Signal

Generates the White Pattern internally.

The selectable range is from 100%(White) to 0%(Black).

### Key LED

Sets On to turn on the LED of the keys, and sets Off to turn off the LED of the keys.

### OSD Time

Adjusts the display time of the OSD menu.

[10 Sec.]: The OSD menu will be disappeared after 10 seconds.

[20 Sec.]: The OSD menu will be disappeared about 20 seconds.

[30 Sec.]: The OSD menu will be disappeared about 30 seconds.

[On]: The OSD menu will not be disappeared.

### OSD Position

Sets the position of OSD. Selects [Center] to [Left Bottom].

### System Data

-[Save to USB]

Saves the current settings of the monitor to the USB memory.

-[Copy from USB]

Recalls the settings saved in the USB memory, and load them to the monitor.

- Saves and adjusts the settings of User 1 of User Preset.

### Time Code


- Selects the type of the time code to be displayed.

[VITC]: To display the VITC time code

[LTC]: To display the LTC time code



## Remote Menu

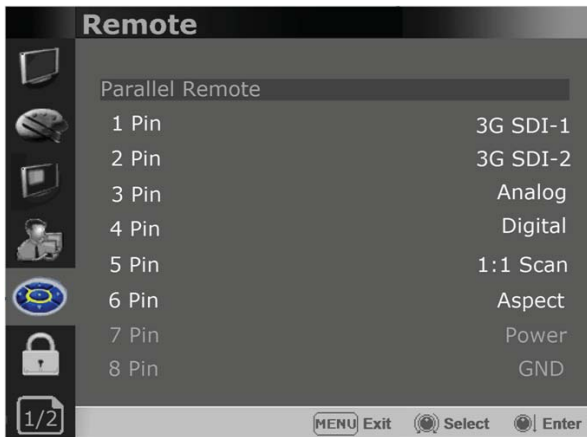

### Parallel Remote

Selects the Parallel Remote connector pins for which you want to change the function. Various functions can be assigned to pin 1 to 6. The following lists the functions which can be assigned to the pins.

[--], [SDI], [Analog], [HDMI], [PBP], [1:1 Scan], [Aspect], [H/V Delay], [Blue Only], [Mono], [A 16:9], [A 4:3], [A 4:3OnAir], [A 15:9], [A 14:9], [A 13:9], [A 1.85:1], [A 2.35:1], [A 1.85:1&4:3], [Center M.], [Area 80%], [Area 85%], [Area 88%], [Area 90%], [Area 93%], [Area 100%], [TALLY R], [TALLY G]

\*\* [--]: No function is assigned.

\*7 Pin: For Power On and Off only

\*8 Pin: For Ground only



### Monitor ID

Sets the ID of the monitor to control the monitor through Serial Remote or Network.

### In-Monitor Display Setting

The monitor supports "TSL UMD Protocol – V3.1" provided by Television System Ltd. [Transparency], [Text Color], [Left Tally Color], [Right Tally Color] can be set in the setting menu.



\*\* The monitor displays English alphabet, numbers, Symbolic codes.

\*\* Up to 16 characters can be displayed in English.

### IMD Type

Selects [TSL V3.1] to activate IMD and [Off] to turn it off.

### Transparency

Selects [Full] or [Half] for the background of IMD.

-[Full]: The background is black. The displayed image is hidden behind the background.

-[Half]: The background is transparent. The displayed image can be seen indistinctly behind the IMD display.

### Text Color

Selects the color of text displayed in IMD.

-[White],[Red],[Green],[Blue],[Yellow],[Cyan],[Magenta] can be selected.

### Left Tally Color

Selects the color of the left tally lamp displayed in IMD.

-[White],[Red],[Green],[Blue],[Yellow],[Cyan],[Magenta] can be selected.

### Right Tally Color

Selects the color of the right tally lamp displayed in IMD.

-[White],[Red],[Green],[Blue],[Yellow],[Cyan],[Magenta] can be selected.



## Security Menu



### Security Setting

#### Key Lock

When Key Lock function is set On, the change of the menu settings and functions doesn't work.

\*\* The same function as [Key Lock] button on the front panel.

#### Password Lock

- This function allows the user to protect the setting values through password.
- When the Password Lock is applied, the functions and the setting values can be changed, but they are not saved.
- When you protect the setting values with a password, set a four-digit number.
- The initial password is 0000.
- When you use [Password Lock], change the initial password first.

#### User Parameter Lock

Selects [On] to protect the setting values.  
Selects [Off] to not protect by the password.  
When [On] is selected, OSD background is displayed with the lock image as shown below.



#### Change Password

Changes the password.


## 7. Key Functions

### High Dynamic Range(HDR) Display Function

The OBM N series provides the function to display the High Dynamic Range footage.

Postium HDR function allows users to view both highlights and shadow detail of scenes at the same time, thus resulting in more natural and realistic images.

The OBM N series supports PQ EOTF (SMPTE ST 2084), Hybrid Log Gamma and S-Log3.

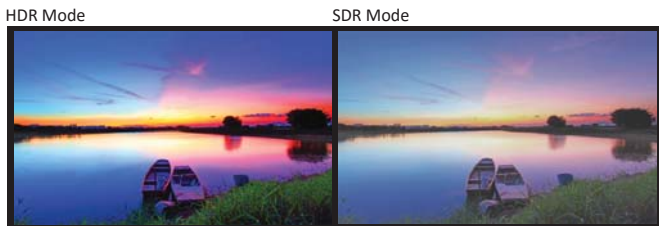

OBM-HDR provides the function of comparing HDR and SDR(Standard Dynamic Range) on the displayed image on the OBM series simultaneously.



### Adjustable Gamma

Gamma value is adjustable from 1.0 to 3.0 as user's preference to monitor in the dark area of the picture.

Any pictures taken in either light or dark environment can be easily watched or analyzed.




Gamma 1.8

Gamma 2.4

### Focus Assist

This function controls the aperture level of a video signal, and displays images on screen with sharpened edges to help camera focus operation.

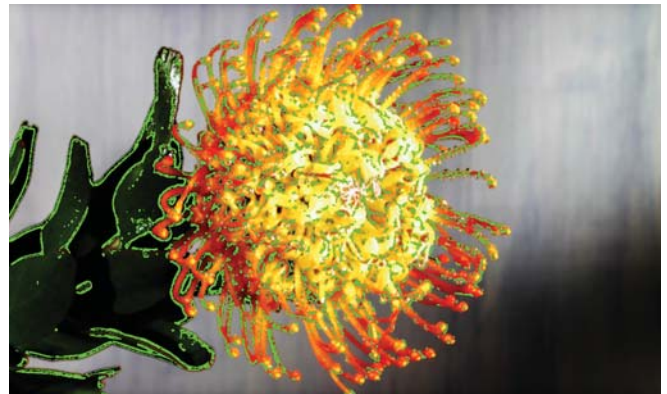

### Waveform & Vector Scope Position Changeable

The position of Waveform and Vector Scope can be changed among Left Top, Right Top, Right Bottom, Left Bottom.



### Waveform, Vector Scope Size Adjustable

The image size of Waveform and Vector Scope can be changed between Small and Large.



Waveform, Vector Scope - Large

Waveform, Vector Scope - Small

### System Date Copy

This function allows users to save the monitor configuration and adjustment settings on the USB memory stick and load them to other monitors. This is useful for multiple monitor systems, allowing the transfer of one monitor's setup and adjustment data to another.

### In-Monitor Display(IMD) Function

The image source names and tally information can be displayed on the screen, with an external remote function via Ethernet. The TSL system protocol is supported. The color of the source name and tally color can be selectable among White, Red, Green, Blue, Yellow, Cyan, Magenta.



### Password Lock for User Preset

When multiple users share the same monitor, each user can register his/her own password for color temperature and user preset data. This ensures the users correctly recalls their preset data, and keeps preset information safe from unauthorized use.

### Custom 3D LUT File Import


The OBM series allow the user to import 3D Look-up Table for accurate and consistent color matching between individual displays. as well as using customized 'looks' that have been created by 3rd party color-grading applications. 33<sup>^3</sup> and 65<sup>^3</sup> cube file is supported.




### HDR Waveform

When HDR mode is set on, HDR Waveform is displayed on screen.


HDR Mode + HDR Waveform

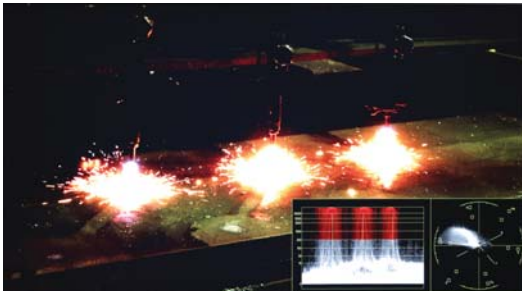


HDR Waveform

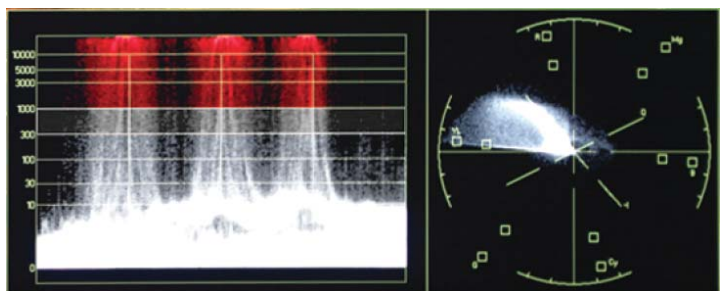

SDR Mode + SDR Waveform

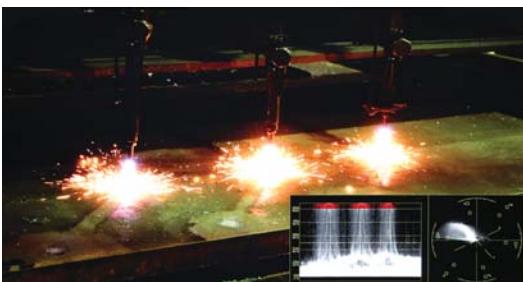

SDR Waveform

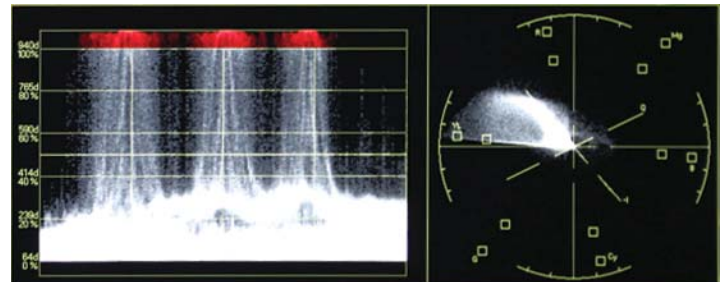


### Various Markers

The OBM U series can display various markers, including aspect marker, area marker, and center marker. In addition, the detailed display settings of each marker are allowed. For example, the color, brightness, horizontal/vertical position, and thickness of aspect markers can all be adjusted.



Display various markers

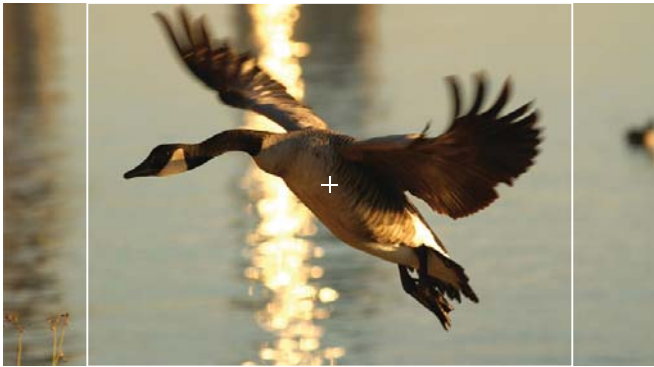

Aspect Mat 0



Aspect Mat 5

### Camera Log Selection

The OBM series has the built-in camera LUT of the various camera manufacturers. It allows users to load the following camera logs.

Log-C, C-Log / S-Log2, S-Log3 / J-Log1  
The more camera LUTs will be updated.

### Zebra

This function displays the Luma(Y') level of the input image in zebra pattern.




### Camera Log Mapped SDI Loopout

This function allows to load the camera log to the original image and then send the camera log mapped image to another monitor through SDI loop out.

[Monitor 1]



[Monitor 2]

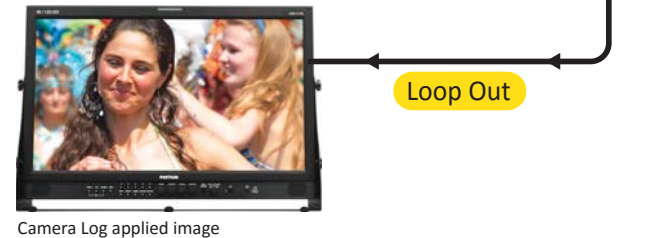

### Remote Control via Ethernet

The OBM U series can be connected via Ethernet connection and controlled remotely on the network.





## 8. Available Signal Formats

This monitor is applicable to the following signal formats

### HD-SDI

Signal System	Signal Format
1920x1080 / 23.98, 24, 25, 29.97, 30p/Psf, 50, 59.94, 60i	4:2:2 YCbCr 10bit
2048 x 1080 / 23.98, 24, 25, 29.97, 30p/Psf	4:2:2 YCbCr 10bit
1280x 720 / 23.98, 24, 25, 29.97, 30, 50, 59.94, 60p	4:2:2 YCbCr 10bit

### 3G-SDI

Signal System	Signal Format	
1920 x1080 / 50, 59.94, 60p	4:2:2 YCbCr 10bit	Level A / Level B-DL
1920 x1080 / 23.98, 24, 25, 29.97, 30p/Psf, 50, 59.94, 60i	4:4:4 RGB 10bit 4:4:4 YCbCr 10bit 4:4:4 RGB 12bit 4:4:4 YCbCr 12bit	Level A / Level B-DL
1280x 720 / 23.98, 24, 25, 29.97, 30, 50, 59.94, 60p	4:4:4 RGB 10bit 4:4:4 YCbCr 10bit	Level A
2048 x1080 / 48, 50, 60p	4:2:2 YCbCr 10bit	Level A / Level B-DL
2048 x 1080 / 23.98, 24, 25, 29.97, 30p/Psf	4:4:4 RGB 10bit 4:4:4 YCbCr 10bit 4:4:4 RGB 12bit 4:4:4 YCbCr 12bit	Level A / Level B-DL

## HDMI / DVI

Signal System	Signal Format
640 x 480p@59.94 / 60	4:4:4 RGB 8 / 10 / 12bit 4:4:4 YCbCr 8 / 10 / 12bit 4:2:2 YCbCr 12bit
720 x 480p@59.94 / 60	
720 x 576p@50	
1280 x 720p@50 / 59.94 / 60	
1920 x 1080i@50 / 59.94 / 60	
1920 x 1080p@23.98 / 24 / 25 / 29.97 / 30 / 50 / 59.94 / 60	
2048 x 1080p@23.98 / 24 / 25 / 29.97 / 30 / 47.95 / 48 / 50 / 59.94 / 60	
800 x 600p@60	4:4:4 RGB 8 / 10 / 12bit 4:4:4 YCbCr 8 / 10 / 12bit 4:2:2 YCbCr 12bit
1024 x 768p@60	

## Analog Composite

Signal System	Signal Format
487/59.94i	NTSC
576/50i	PAL
487/59.94i	PAL-M
576/50i	SECAM

## Analog Component

Signal System
720 x 480i/P@59.94/60
720 x 576i/P@50
1280 x 720P@50/59.95/60
1920 x 1080I@50/59.94/60
1920 x 1080P@23.98/24/25/29.97/30/50/59.94/60

## 9. Product Specifications

### OBM-N180 / N210 / N240

ITEM		OBM-N180	OBM-N210	OBM-N240
Input	2 x BNC	3G/HD/SD-SDI-1/2		
	1 x HDMI	HDMI 1.3a		
	3 x BNC (YPbPr)	Analog(YPbPr)		
	1 x BNC (CVBS)	Composite		
	1 x DVI	DVI-D		
Output	2 x BNC	3G/HD/SD-SDI-1/2		
Input Signal Format	SMPTE ST 425-AB	1080p(60/59.94/50/30/29.97/25/24/23.98/30sF/29.97sF/25sF/24sF/23.98sF) / 1080i (60/59.94/50)		
	SMPTE ST 274	1080p(30/29.97/25/24/23.98/24sF/23.98sF)		
		1080i (60/59.94/50)		
	SMPTE ST 296	720p(60/59.94/50)		
	SMPTE ST 260	1920 x 1035i(60/59.94)		
	SMPTE ST 2048	2048 x 1080p(24/23.98/24sF/23.98sF)		
	SMPTE ST 125	480i(59.94)		
	ITU-R BT.656	576i(50)		
	HDMI	~ 1080p(60)		
	1 x DVI	VESA/IBM Modes		
Audio In/Out	1 x Phone Jack In	Line In(Stereo)		
	1 x Phone Jack Out	H/P Out(Front, Stereo)		
	2 x Speaker Out	Stereo		
Display	Size	18.5" LCD	21" LCD	24" LCD
	Resolution	1920 x 1080 (16:9)	1920 x 1080 (16:9)	1920 x 1200 (16:10)
	Pixel Pitch	0.213mm	0.248mm	0.270mm
	Color	1.064B colors(8bit+2bit FRC)	1.064B colors(8bit+2bit FRC)	1.064B colors(8bit+2bit FRC)
	Viewing Angle	178(H), 178(V)	178(H), 178(V)	178(H), 178(V)
	Luminance of White	350cd/m <sup>2</sup>	250cd/m <sup>2</sup>	300cd/m <sup>2</sup>
	Contrast	1000 : 1	1000 : 1	1000 : 1
	Display Area (H x V)	408.96 x 230.04 (mm)	476.64 x 268.11 (mm)	518.4 x 324.0 (mm)
General	1 x Ethernet	Control/Update, RJ-45P Input / Output		
	1 x GPIO	GPI-7 Port, RJ-45P Jack		
	2 x Serial	RS-422 Jack, RJ-45P Input / Output		
	1 x USB	For Firmware Update, Color Calibration		
	Power Requirements	AC(100-230V,50/60Hz)/DC12V		
	Power Consumption	Max 40W	Max 40W	Max 40W
	Operating Temperature	0 ~ 40°C(32°F~104°F)	0 ~ 40°C(32°F~104°F)	0 ~ 40°C(32°F~104°F)
	Operating Humidity	20 ~ 80% RH	20 ~ 80% RH	20 ~ 80% RH
	Weight	6.5kg/14.33lbs	8.5kg/18.73lbs	10kg/22.04lbs
	Dimensions(with stand)	470 x 335 x 120mm	538 x 363 x 120mm	600 X 430 X 130mm
		18.50 x 13.18 x 4.72inch	21.18 x 14.26 x 4.72inch	23.62 x 16.92 x 5.11inch
	Accessories	Power Cable		
	Option	Rack Mount Kit / Carrying Case / Sun Hood / Acrylic Protector / V-Mount		

\* Specifications are subject to change without prior notice for the product quality improvement.

## OBM-N310 / N420

ITEM		OBM-N310	OBM-N420
Input	2 x BNC	3G/HD/SD-SDI-1/2	
	1 x HDMI	HDMI 1.3a	
	3 x BNC (YPbPr)	Analog(YPbPr)	
	1 x BNC (CVBS)	Composite	
	1 x DVI	DVI-D	
Output	2 x BNC	3G/HD/SD-SDI-1/2	
Input Signal Format	SMPTE ST 425-AB	1080p(60/59.94/50/30/29.97/25/24/23.98/30sF/29.97sF/25sF/24sF/23.98sF) / 1080i (60/59.94/50)	
	SMPTE ST 274	1080p(30/29.97/25/24/23.98/24sF/23.98sF)	
		1080i (60/59.94/50)	
	SMPTE ST 296	720p(60/59.94/50)	
	SMPTE ST 260	1920 x 1035i(60/59.94)	
	SMPTE ST 2048	2048 x 1080p(24/23.98/24sF/23.98sF)	
	SMPTE ST 125	480i(59.94)	
	ITU-R BT.656	576i(50)	
	HDMI	~ 1080p(60)	
1 x DVI	VESA/IBM Modes		
Audio In/Out	1 x Phone Jack In	Line In(Stereo)	
	1 x Phone Jack Out	H/P Out(Front, Stereo)	
	2 x Speaker Out	Stereo	
Display	Size	32" LCD	42" LCD
	Resolution	1920 x 1080 (16:9)	1920 x 1080 (16:9)
	Pixel Pitch	0.363mm	0.484mm
	Color	1.064B colors(8bit+2bit FRC)	1.064B colors(8bit+2bit FRC)
	Viewing Angle	178(H), 178(V)	178(H), 178(V)
	Luminance of White	350cd/m <sup>2</sup>	700cd/m <sup>2</sup>
	Contrast	1200 : 1	4000 : 1
	Display Area (H x V)	698.4 x 392.85 (mm)	930.24 x 523.26 (mm)
General	1 x Ethernet	Control/Update, RJ-45P Input / Output	
	1 x GPIO	GPI-7 Port, RJ-45P Jack	
	2 x Serial	RS-422 Jack, RJ-45P Input / Output	
	1 x USB	For Firmware Update, Color Calibration	
	Power Requirements	AC(100-230V,50/60Hz)/DC24V	AC(100-230V,50/60Hz)/DC24V
	Power Consumption	Max 100W	Max 156W
	Operating Temperature	0 ~ 40°C(32°F~104°F)	0 ~ 40°C(32°F~104°F)
	Operating Humidity	20 ~ 80% RH	20 ~ 80% RH
	Weight	28kg/61.72lbs	32kg/70.54lbs
	Dimensions(with stand)	762 x 515 x 210mm	988x640x300mm
		30 x 20.27 x 8.26inch	38.89 x 21.19 x 11.81inch
	Accessories	Power Cable	
	Option	Wall Mount Kit / Carrying Case	

\* Specifications are subject to change without prior notice for the product quality improvement.

## OBM-N460 / N550

ITEM		OBM-N460	OBM-N550
Input	2 x BNC	3G/HD/SD-SDI-1/2	
	1 x HDMI	HDMI 1.3a	
	3 x BNC (YPbPr)	Analog(YPbPr)	
	1 x BNC (CVBS)	Composite	
	1 x DVI	DVI-D	
Output	2 x BNC	3G/HD/SD-SDI-1/2	
Input Signal Format	SMPTE ST 425-AB	1080p(60/59.94/50/30/29.97/25/24/23.98/30sF/29.97sF/25sF/24sF/23.98sF) / 1080i (60/59.94/50)	
	SMPTE ST 274	1080p(30/29.97/25/24/23.98/24sF/23.98sF)	
		1080i (60/59.94/50)	
	SMPTE ST 296	720p(60/59.94/50)	
	SMPTE ST 260	1920 x 1035i(60/59.94)	
	SMPTE ST 2048	2048 x 1080p(24/23.98/24sF/23.98sF)	
	SMPTE ST 125	480i(59.94)	
	ITU-R BT.656	576i(50)	
	HDMI	~ 1080p(60)	
1 x DVI	VESA/IBM Modes		
Audio In/Out	1 x Phone Jack In	Line In(Stereo)	
	1 x Phone Jack Out	H/P Out(Front, Stereo)	
	2 x Speaker Out	Stereo	
Display	Size	46" LCD	54.6" LCD
	Resolution	1920 x 1080 (16:9)	1920 x 1080 (16:9)
	Pixel Pitch	0.530 mm	0.63mm
	Color	1.064B colors(8bit+2bit FRC)	1.064B colors(8bit+2bit FRC)
	Viewing Angle	178(H), 178(V)	178(H), 178(V)
	Luminance of White	700cd/m <sup>2</sup>	700cd/m <sup>2</sup>
	Contrast	4000 : 1	4000 : 1
	Display Area (H x V)	1018.08 x 572.67 (mm)	1209.6 x 680.4 (mm)
General	1 x Ethernet	Control/Update, RJ-45P Input / Output	
	1 x GPIO	GPI-7 Port, RJ-45P Jack	
	2 x Serial	RS-422 Jack, RJ-45P Input / Output	
	1 x USB	For Firmware Update, Color Calibration	
	Power Requirements	AC(100-240V, 50/60Hz)	AC(100-240V, 50/60Hz)
	Power Consumption	220W	220W
	Operating Temperature	0 ~ 40°C(32°F~104°F)	0 ~ 40°C(32°F~104°F)
	Operating Humidity	20 ~ 80% RH	20 ~ 80% RH
	Weight	35kg/77.16lbs	37kg/81.57lbs
	Dimensions(with stand)	1074x687x300mm	
		42.28 x 27.04 x 11.81inch	
	Accessories	Power Cable	
	Option	Wall Mount Kit / Carrying Case	

\* Specifications are subject to change without prior notice for the product quality improvement.



**POSTIUM KOREA Co., Ltd.**

208, Building A, Samsung Techno Valley, 140, Tongil-ro,  
Deogyang-gu, Goyang-si, Gyeonggi-do, Korea, 10594

Tel : +82.2.354.6055 / Fax : +82.2.354.6056

E-mail : [sales@postium.com](mailto:sales@postium.com)

[www.postium.com](http://www.postium.com)